Cooking Zones

Position of zone


Size of zone (mm)

Power (W)



- 4 zone
- Intelligent touch control with digit display
- 19 power levels
- Booster
- 4 x independent timers
- Quick Access functions:
 - Keep warm
 - Simmer
 - ❖ Sear
- Elapsed timer / Recall function / Boil function / ICS





#1 + #2

horiZonetech

400x230

5000

Slider grill function

10 safety features:

- Residual heat indicator
- Small object safety
- Anti overflow
- Autostop® system
- Keypad lock
- Automatic saucepan detection
- Temperature limiter
- Low voltage, Connection error, Over Tension

Accessories:

- DAI7001S French wood chopping board (comes with set)
- DAI7002S grill (needs to be purchased)
- DAI7003S plancha (needs to be purchased)



#3

Right Front

160

2400



#3

Right Rear

230

3700



HORIZONE® PLAY TECHNOLOGY

Unique concept


➤ A multi-function hob thanks to the use of accessories dedicated to culinary art and cooking (Cutting board, Grill, Plancha)

Customer benefits


> Up to 3 appliances in 1





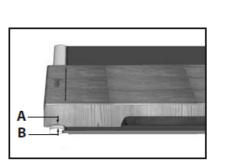



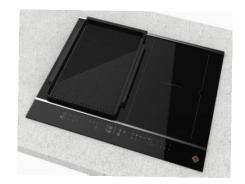

•Accessories hook on the rear profile and remain stable:

> The appliance is positioned with a guide at the rear of the cooking surface which allows the accessories in the HoriZone Play range such as the choppping board, griddle or grill to be positioned.

•Grill / Griddle function:

> This function allows you to grill or griddle accessories in the HoriZone, so that food can be grilled





Electrical Connections

- Maximum electrical power (W): 7400
- Current(Amp): 32
- Voltage(V): 220 240
- Frequency(Hz): 50 / 60
- Length of electrical supply cord(cm): 130
- Type of plug: Without

Dimensions

- Dimension of product(mm): H64 x W650 x D515
- Built In dimension(mm): W560 x D490
- Net weight(kg): 13
- Gross weight(kg): 14



Installation Diagram

